

QUICK START

This light has 3 main levels (High, Medium, and Low) and a beacon-strobe mode.

- When the light is Off:
 - One short-click turns on the light to High.
 - Two short-clicks turn on the light to Medium.
 - Three short-clicks turn on the light to the beacon-strobe mode.
 - Press-and-hold (for over 0.6 seconds) turns on the light to Low and then Medium and High. Release at the desired level.
- When the light is On, a short-click turns off the light.

IMPORTANT SAFETY INSTRUCTIONS

- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- To reduce the risk of electrical shock, do not expose battery or internal flashlight components to water or other liquids.
- Use only recommended batteries.
- Remove batteries from flashlight before performing any routine maintenance or cleaning.
- Do not disassemble the flashlight. The LED cannot be replaced.
- Do not operate flashlight near flammable liquids or in gaseous or explosive atmospheres. Internal sparks may ignite fumes.
- Do not permit children to use flashlight unsupervised.
- Do not expose battery or internal flashlight components to rain.
- Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water. If liquid gets in your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention.
- Do not crush, drop or damage batteries. Do not use batteries that have been dropped or received a sharp blow. A damaged battery is subject to explosion. Use a damaged battery can result in serious personal injury.
- Save these instructions. Refer to them frequently and use them to instruct others who may use this product.

ADVANCED OPERATION

● To use another sub-level

For each of the three main levels (High, Medium and Low), there are two corresponding sub-levels (H1 and H2, M1 and M2, L1 and L2).

1. Go to a main level with short-clicks or press-and-hold
2. Double-click to toggle between the two sub-levels (i.e. between H1 and H2, M1 and M2, or L1 and L2)

The last sub-levels used in each main level are memorized and will come back on when you go back to that main level. Sub-level settings are memorized when the light is turned off and through battery changes.

● Programming the second sub-level

The first sub-levels (H1, M1, and L1) of each main level have fixed (none configurable) brightness. The second sub-levels (H2, M2 and L2) can be further programmed to different brightness levels.

1. Go to a main level with short-clicks or press-and-hold
2. Double-click 6 times to enter the programming mode for that main level
3. On subsequent double-clicks the light will cycle through different brightness levels.
4. When you have the choice you want, exit the programming mode by performing a short-click.

Second sub-level settings are memorized when the light is turned off and through the battery changes.

● Changing levels after the light is On

When the light is On, press-and-hold to cycle through Low, Medium and High. Release at the desired level. Note that the light always cycle from Low regardless which level you are currently in.

● Beacons and Strobes

The beacon-strobe mode can be accessed from 3 short-clicks when the light is Off. Once in the beacon-strobe mode, you can double-click to cycle through different types of beacons and strobes. Beacon-strobe settings are memorized when the light is turned off and through battery changes.

● Battery Indicator

This light uses the main LED (flashing 1 to 4 times) to indicate the estimated remaining capacity of the batteries. To start the battery indicator, short-click 4 times without pause.

Please refer to www.zebralight.com for information specific to this product.

WARRANTY

ZebraLight, Inc. warrants its products to be free from defects in materials and workmanship. We will repair or replace, at our option, without charge, any products or parts which is found to be defective under normal use and service within 12 months from the date of purchase with proof of purchase. Such repair or replacement shall be the purchaser's sole and exclusive remedy under this warranty. This warranty does not cover normal maintenance and service and does not apply to any products or parts which have been subject to modification, misuse, abuse, negligence, accident, or improper maintenance or repair by anyone other than ZebraLight.

Our guarantee is unconditional. If any purchase fails to meet your complete satisfaction, for any reason, you may return it or exchange it within 30 days of receipt of your shipment. Before returning any product, you MUST obtain a Return Merchandise Authorization number (RMA) from a customer service representative. Include the original invoice received with the merchandise and send the package prepaid, via UPS or insured USPS Mail to:

ZebraLight, Inc.

Attention: Warranty/Repair Department
2908 Story Road W
Irving, TX 75038
U.S.A.

ZebraLight flashlight and headlamp products are designed and engineered in the U.S. and manufactured in China. The distinctive shapes and styles of all ZebraLight products are trademarks of ZebraLight, Inc. U.S. and international patents are pending.